

# User Guide

## CM2 CONTROLMASTER



### Headrest adjustment ① :

To adjust the headrest height, lift up the headrest to desired position.

To Lower the headrest, press the release button at the base of the left headrest support.

To adjust the headrest angle, tilt the headrest forward or back, it can also be opened out or closed to get the best support. It can take a reasonable amount of force to adjust the headrest.

### Armrest adjustment ②:

To raise or lower the armrest, hold up the armrest little bit and turn the adjustment wheel under the armrest to desired position.


### Backrest independent angle adjustment ③:

To change the backrest angle, whilst sitting on the chair, lift the handle and move the backrest to desired position, then release the handle to lock.

### Seat height adjustment ④:

To raise the seat height, remove your weight from the seat and pull up on the height adjustment lever, release the lever when reaching the desired position.

To lower the seat height, while seated, pull up slowly on the height adjustment lever, release the lever when the seat is at the desired height.

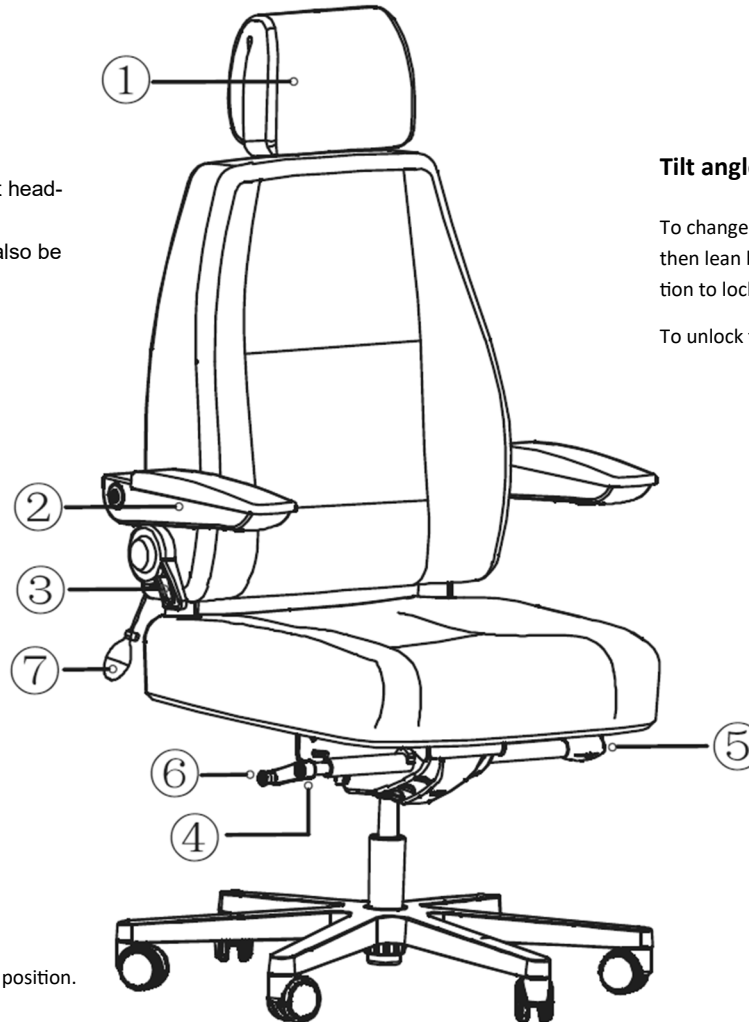

### Tilt angle/Lock adjustment ⑤:

To change the seat tilt angle, rotate the handle towards the front then lean backwards to the desired position, Rotate the handle to the back position to lock it. It is lockable in 3 positions.

To unlock the seat tilt, rotate the lever to the front, then lean back in the chair to

### Tilt tension adjustment ⑥:

To adjust the seat tilt tension turn the tension adjustment handle on the mechanism to desired tension.

Turn to the front to make it harder.

Turn to the back to make it easier.

### Lumbar support adjustment ⑦:

To enlarge the lumbar support (air bag) depth, keep squeezing the bulb until you get the right back shape

To reduce the Lumbar press the button ⑧ on the side of the pump to release the air until it reach your desired position.

